


JUSTUS


Kurzanleitung / Quick start Guide / Guide rapide

Heizen mit Holz / Heating with wood / Chauffer au bois


1. Automatikregler Brennstoff Holz Automatic regulator / Régulateur automatique

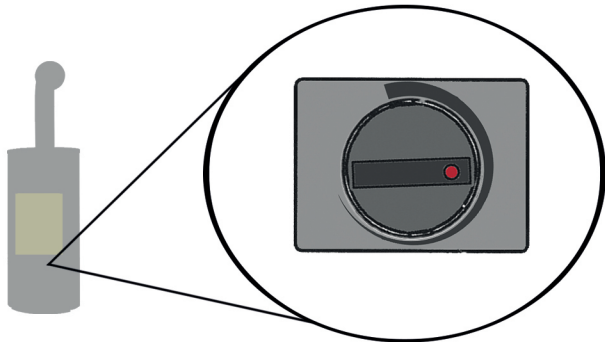


2. Sekundärluftregler Start Secondary air control / Régulateur d'air secondaire

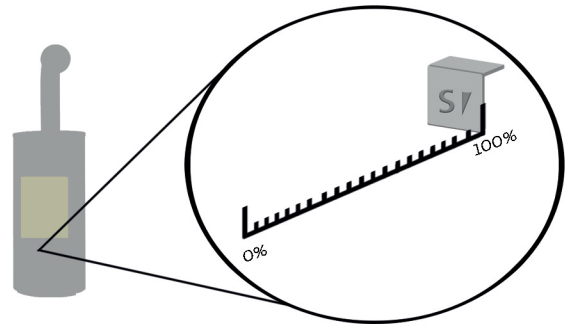

3. Holz Wood / Bois

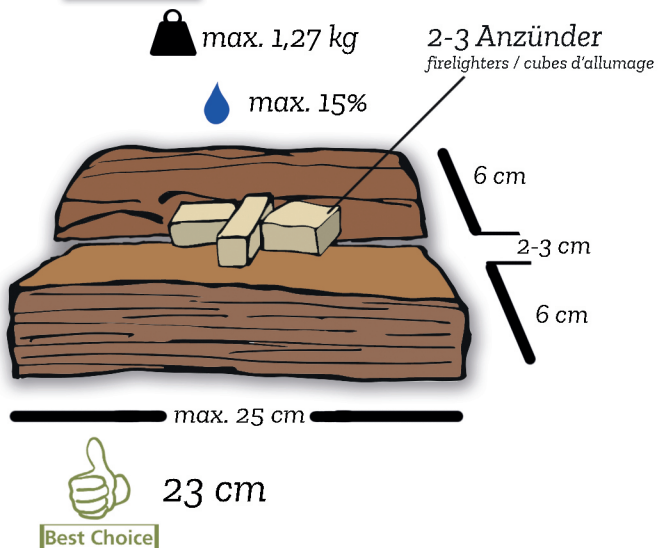


4. Stapeln + anzünden Stacking + lighting / Empiler + allumer

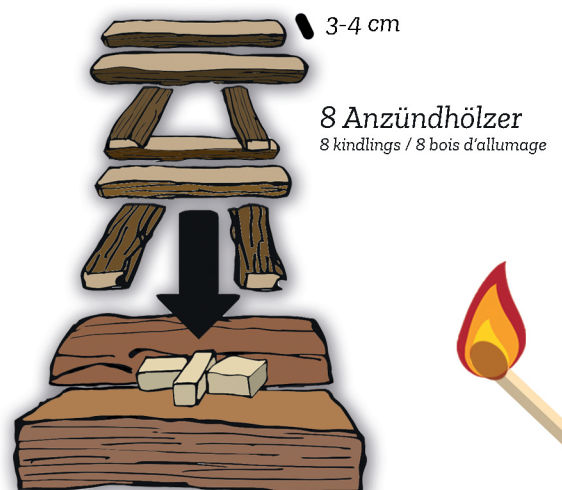

5. Holz nachlegen Stoke fire with wood / recharger le bois



Keine Flammen
no flames / pas de flamme


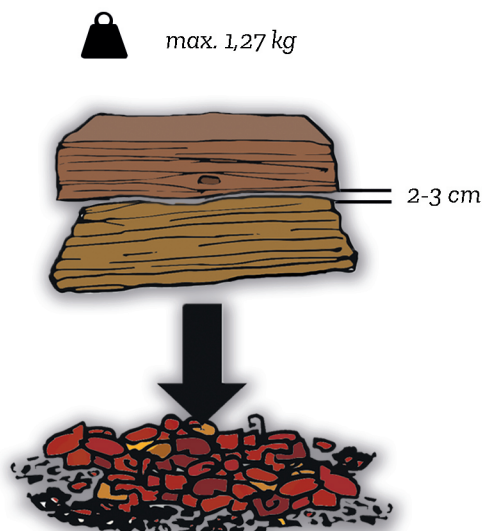


JUSTUS


Kurzanleitung / Quick start Guide / Guide rapide

Heizen mit Holz / Heating with wood / Chauffer au bois

7. Sekundärluft einstellen Secondary air control / Ajuster l'air secondaire

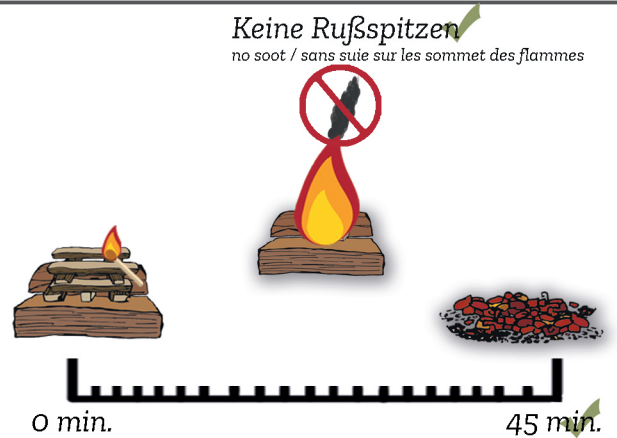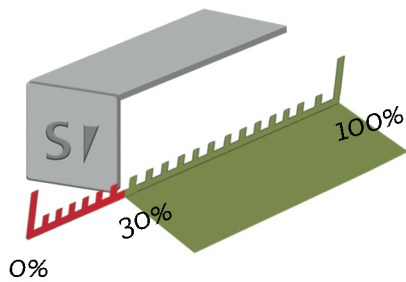


8. Beenden End / Terminer

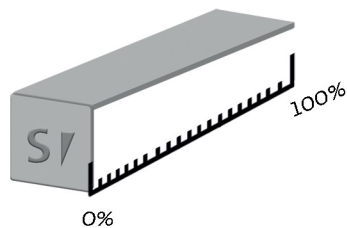

9. Reinigung Cleaning / Nettoyage



1x / Tag
day
jour

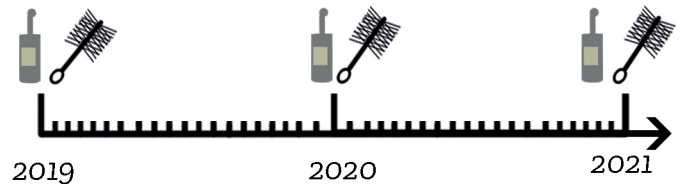

4807 Baltrum 2932370000



www.Justus.de



Videoanleitung